

Using P&ID Master with AutoCAD 2012

P&ID Master can be accessed in two (2) ways from within AutoCAD,

1. AutoCAD Menu Bar
2. P&ID Master Toolbars

Note: The P&ID Master support folder (i.e., C:\Program Files\Rsa.\Pid) must be included in the ACAD "Support File Search Path".

AutoCAD MENUBAR

The AutoCAD Menu Bar can be turned on by typing MENUBAR on the AutoCAD command and pressing ENTER. Set the MENUBAR value by entering "1" on the command line and pressing ENTER.


This will display the AutoCAD Menu Bar across the top of the screen. If P&ID Master has already been loaded in AutoCAD you will see the "PID" pull-down menu in the AutoCAD menu bar area.

Otherwise load the P&ID Master menu file (RSAPID.mnu) using the AutoCAD MENULOAD command. After loading the P&ID Master menu, the P&ID Master pull-down menu "PID" will be displayed in the AutoCAD menu bar area.

P&ID Master Toolbars

P&ID Master Toolbars can be accessed in all the same ways that the standard AutoCAD toolbars are displayed.

Once the P&ID Master menu has been loaded into AutoCAD, you can right-click in the toolbar areas, normally the grey area at the top of the AutoCAD screen, and display the AutoCAD Toolbar selection menu.

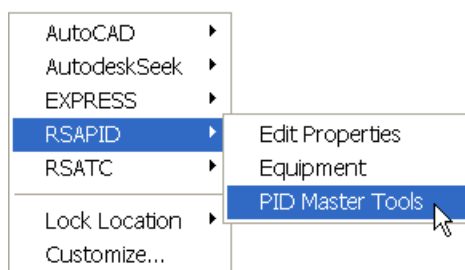

Select the P&ID Master Tools options to display the main P&ID Master toolbar.